# Q-NOTE QN-7000HX TABLET

# USER MANUAL

Product intended to be used in ;

Turkey [√]

# TABLE OF CONTENTS

1 OUTLOOK DESCRIPTION....1
2 POWER BUTTON USAGE....1
3 TOUCH-SCREEN NAVIGATION....2
4 U-Disk....2
5 USING MICRO-SD CARD....3
6 GETTING STARTED....3
HDMI video play....4
7 DESKTOP....5
8 SCREEN LOCK....6
9 PRE-LOADED APPLICATIONS....7
10 STATUS AND NOTIFICATION AREA....9
11 APPLICATION MANAGEMENT....10
Install Android Applications....10
Download Android Applications directly from a Website....10
Uninstalling Android Applications....11
12 WEATHER....11
13 CLOCK....12
Alarm....12
14 APP MARKET....14
Download Applications....14
App Market Function Menu....14
15 BROWSER....15
16 CALENDAR....15
Add Event....16
17 CAMERA....16

Take Pictures..... 16
Take Videos..... 17
Single-motion Panorama..... 17
18 CALCULATOR..... 17
19 MYRECORDER..... 18
20 EMAIL..... 18
Add Email accounts..... 18
Email Inbox..... 19
Edit Email Accounts..... 20
Delete Email Accounts..... 20
21 FILE BROWSER..... 21
Copy Media between Computer and Tablet..... 22
Connected to the local area network shared folders..... 23
Delete files..... 23
22 MY MUSIC..... 23
Play Music..... 23
Create Music Widget..... 24
The Operation with Music and Playlist..... 24
Sort by title or date added..... 25
23 MY VIDEO..... 26
Play Video..... 26
Create Video Widget..... 26
The Operation with Video..... 26
The Operation with Playlist..... 27
24 MY PHOTO..... 27
The operation with picture list..... 28
Slide show and settings..... 28

Doodle....28
Create Photo Widget....29
25 Gallery....29
The operation with photo and video list....29
26 SCREEN CAPTURE....30
27 TASK MANAGERMENT....31
Stopping Applications....31
Uninstall Applications....31
Install Applications....31
28 WI-FI....31
29 3G NETWORK....32
30 GPS....33
31 PPPoE SETTINGS....34
32 ETHERNET....34
33 SETTINGS....34
FREQUENTLY ASKED QUESTIONS....40
BATTERY MANAGEMENT....42
Charge battery....42
IMPORTANT SAFETY PRECAUTIONS....43
Appendix : The optional parts and models....43

System: Android 4.0

Proxessor: VIA8850

Edition: V01

DA30

# 1 OUTLOOK DESCRIPTION

# 2 POWER BUTTON USAGE

**Turn On:** Press the power button and hold for 2 seconds.

**Turn Off:** Press the power button and hold for 2 seconds →tap **Power off**→tap **OK**.

**Reboot:** Press the power button and hold for 2 seconds →Tap **reboot.**

**Quickly Hibernate/wake-up:** Press the power button and hold for 2 seconds →tap **Hibernate** to enable the device to hibernate，or press the power button briefly to make the device to hibernate/ wake-up.

**Airplane mode:** Press the power button and hold for 2 seconds →Tap

**Airplane mode**.

**Silent mode:** Press the power button and hold for 2 seconds →Tap .

**Vibrate mode:** Press the power button and hold for 2 seconds →Tap .

**Normal mode:** Press the power button and hold for 2 seconds →Tap .

**Force Off:** If device does not respond, press and hold the power button for 5 seconds.

**(Warning: Force off could lead to unpredictable system errors!)**

**Reset:** Press the reset button could be reset the device. It's will clear the all data, Please be careful to use the function. (**Note:** The current reset function can't restart, can only be turned off, so you need to press the power button restart the device after reset).

# 3 TOUCH-SCREEN NAVIGATION

The touch-screen allows for quick, easy and convenient navigation for all applications.

Refer to the following method to operate the touch screen by the finger pulp:

**Tap:** Quick tap & release on an item on the screen.

**Touch & hold:** Touch and hold one place about 2 seconds, and then release to display an options window.

**Finger slide:** Touch & slide your finger across the screen and then release.

☆ *To avoid scratching or crushing, do not place objects on the touch screen surface.*

# 4 U-Disk

### Insert U-Disk

Insert your U-disk into the device via USB host transfer cable. When ready for use, enter into the file browser and switch to the USB folder to view it.

### Remove U-Disk

Close all applications or documents which have been opened on the U-disk.

Tap → **Settings** →**Storage** →**USB storage** → **Unmount this storage device.** When it displayed **Mount this device** and then you can unplug the U-disk.

☆ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the U-disk.*

---

# 5 USING MICRO-SD CARD

☆ *The device supports maximum 32GB microSD card.*

Insert your card into the microSD slot until it clicks into place. It's OK.

### Remove microSD Card

all applications or documents which have been opened on the card.

Tap → **Settings** → **Storage** →**SD card** → **Unmount this storage device.** When it displayed **Mount this device** and then press the card lightly; it is partially ejected allowing you to pull the card out.

☆ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the card.*

☆ *We recommend using major brands of memory cards to avoid*

*incompatibility.*

# 6 GETTING STARTED

### Charge the device

☆ *It is not recommended to use the device while charging.*

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the status of "off").

### Turn the device on

Press the power button briefly.

### Wi-Fi Network Setup

Since many features require a Wi-Fi connection, we recommend you to set up your Wi-Fi network now.

1.Tap → **Settings**.

2.Slide **Wi-Fi** switch to turn on.

The device automatically scans and lists all local Wi-Fi Network found. A lock indicates secure **Wi-Fi** networks that require input of password to connect.

1.Tap the desired network which you want to connect → enter the **Network Password** if applicable → tap **Connect**.

2.Tap to return to the Desktop screen.

☆ *If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap* ***Add Wi-Fi network*** *and follow the prompts to add your network.*

### HDMI video play

This device supports connecting with TV through the Mini HDMI, it makes TV and device displaying synchronously. When using this feature, insert

the Mini HDMI cable into the right side of the device interface to connect with TV.

# 7 DESKTOP

**1. Back.**
**2. Home.**
**3. Recent Apps.**
**4. Menu.**
**5. USB debugging connected**
**6. USB connected**
**7. Current time.**
**8. Screen capture.**
**9. Volume.**
**10. Wireless network**
**11. Battery Status.**
**12. Google search.**
**13. Voice search**

**14. Add Widgets/Apps shortcuts or setting wallpapers and more.**

**15. Tap to view the applications screen**

Can make many personalized operation through "add" icon , such as, add widgets, application shortcuts, set wallpaper, add bookmarks, email accounts and set up the shortcut.

☆ *Tap on any application icon to launch it.*

☆ *Touch, hold and then slide icons t position them on the screen.*

☆ *Touch, hold and slide icons onto to remove them from the* ***Desktop*** *screen.*

# 8 SCREEN LOCK

Can be set to automatically lock screen or quickly press the power button to manually lock screen. The system provides four lock screen style for users. You can enter **Settings → Security →Lock Screen** to switch.

Lock screen displays the following:

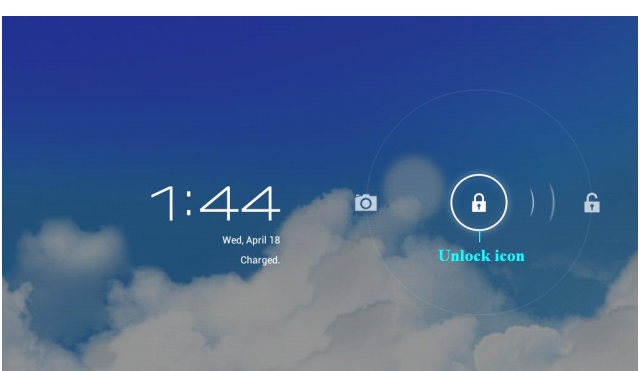

Tap the unlock icon and drop it to the right until out of the circle to unlock.

# 9 PRE-LOADED APPLICATIONS

| | | |
|---|---|---|
| | **Weather** | Set up the degree of temperature, weather auto-refresh rate, add city and view the city's weather. |
| | **Clock** | It can display the time and set the alarm. |
| | **App Market** | Downloaded applications quickly & easily. |
| | **Browser** | Access internet. |
| | **Calendar** | Calendar. |
| | **Camera** | Take normal photos, panoramic photos and take video. |
| | **Calculator** | Do calculation. |
| | **Email** | Send/Receive email using your existing email addresses. |
| | **File Browser** | File manager application for viewing and managing files and apps. Install Android apps and backup files to your SD card. |

| | | |
|---|---|---|
| | **My Music** | Play and manage audio files. |
| | **My Video** | Play and manage video files. |
| | **My Photo** | View and manage photo files. |
| | **Gallery** | Play, view, and manage video and photo files. |
| | **Picture Capture** | Capture image of the screen. |
| | **Task Manager** | Application manager for managing processes. |
| | **Voice search** | Voice search. |
| | **Flash player settings** | Flash player settings. |
| | **Downloads** | View the downloads and the downloading progress. |
| | **Search** | Local search and online search. |
| | **Settings** | Multiple settings for personalizing and enhancing your Device. |

☆ *To move an icon to the* ***Desktop*** *screen, touch & hold the icon, and then release it when it appears on the* ***Desktop*** *screen.*

☆ *Touch, hold and then slide icons to reposition them on the screen.*

☆ Touch, hold and slide icons onto to remove them from the **Desktop** screen.

# 10 STATUS AND NOTIFICATION AREA

On the **Desktop** screen, click the icons which are in the state bar to view more state information and events.

| | |
|---|---|
| **Airplane mode** | Switch airplane mode. |
| **Wi-Fi** | Access to Wi-Fi settings interface. |
| **Auto-rotate screen** | Auto-rotate switch. The screen will automatically rotate with gravity induction after opening. |
| **Brightness** | Set screen brightness. |
| **Notifications** | Open or close the notification. |
| **Settings** | Access to settings. |

# 11 APPLICATION MANAGEMENT

### Install Android Applications

☆ *There are many interesting and free Android applications that can be found on the web. Such as launch your web browser and do a search for "Android applications".*

Purchased or free Android applications that you have downloaded to your computer can be installed quickly & easily on your Tablet using the

**File Browser** or **task manager** application.

1.Copy the **.apk** files which you want to install onto an SD card or USB device → insert or connect to your Device.

2.Tap the **File Browser** application icon.

1.Tap SD or USB and locate the folder in which the .apk application files were saved.

2.Tap on a **.apk** file → **Install**.

The application is installed and the application icon is added to the **Applications** screen.

3.Tap **Open** to launch the application now, or tap **Done** to return to the **File Browser** screen.

### Download Android Applications directly from a Website

You can download Android applications directly from websites, and then install them on your device quickly and easily.

1.Tap the **browser** application icon to launch the internet.

2.Enter the desired website URL, and tap the **download** link for the application you want to install on your device.

3.After the downloading is completed, tap →**Downloads.** Open the applications from app list.

### Uninstalling Android Applications

You can also uninstall the Android applications quickly and easily that you have installed.

1.Tap → **Settings** → **Apps** → **All**.

2.Tap the application you want to uninstall → **Uninstall**.

3.Tap **OK** to confirm the Uninstall.

# 12 WEATHER

Tap the **Weather** application icon.

**General setting**

You can set Temperature Unit(℃), Update frequency .

**About**

View software version number and relevant legal information.

**Add city**

You can add city to **Weather** and view the city's weather information.

**Select city**

In the list of cities, click the city to view the weather information. Select the city and tap to delete the city, tap refresh the weather information.

You can make the weather displayed on the **Desktop** through adding widget. The way is: tap → **Widgets** → **Weather Widget.**

# 13 CLOCK

Tap the **Clock** application icon. You can see the time and date.

**Alarm**

You can use your device as an alarm clock by setting multiple alarms.

**Add Alarm**

1.Tap the **Clock** application icon.

2.Tap **Set alarm** → **Add alarm**.

3.Set up your alarm as desired.

4.Tap **OK.**

5.Selected the alarm clock.

**Shut Off Alarm Alert**

When a scheduled alarm is activated, a pop-up window with the alarm title appears.

Tap **Snooze** if you want to be reminded again in 10 minutes.

ap **Dismiss** to cancel the alert.

**Turn Alarm on**

1.In the Alarm list, find the desired alarm.

2.Click the on the left.

3.After the change to , tap **Done**.

**Edit Alarm**

1.Tap the **Clock** application icon →**Click** .

2.Tap on the alarm you want to edit → make desired edits.

3.After editing, tap **OK.**

**Delete Alarm**

1.Tap the **Clock** application icon →**Click** .

2.Tap on the alarm you want to delete.

3.Tap **Delete** →**OK**.

Tap to return to the **Desktop** screen.

# 14 APP MARKET

The App Market has many applications that you can quickly and easily download to your Tablet.

### Download Applications

1.Tap the **App Market** application icon.

☆ *The first time, it will prompt "**Register**" and "**Login**" options. If you have not yet registered an account, tap **Register**. Otherwise, tap **Login** and enter your login information and then tap **Login** again.*

2.You can select applications from the default **Featured** group, by **Categories**, **Top** (latest, hottest, random), or search by name.

3.Tap on an application → **Download**.

4.After the app is downloaded, tap **Install**.

5.Tap **Open** to launch now, or **Done** to return to the **App Market** screen.

### History

After downloading apps, tap on **History** to manage the installed applications. You can add and/or view comments from other users, launch apps, and uninstall them.

### App Market Function Menu

Tap to display the App Market Function Menu.

### Profile

Tap to access your profile information. You can Change Password, Change Email and Save Password. Tap **Logout** on the top right corner of **Profile** to exit your account.

### About

Displays App store version and support information.

# 15 BROWSER

Users can connect to the Internet through browser.

Click the browser icon on the Desktop , and then you can open the Web browser.

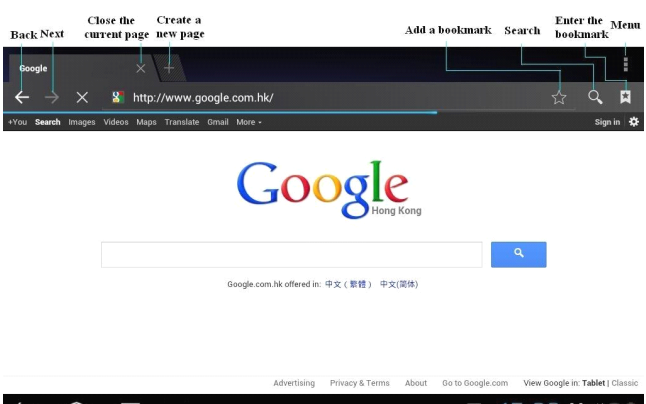

# 16 CALENDAR

Tap the **Calendar** application icon.

For the first time using the **Calendar**, you need to add an Exchange account. Enter account email address and password. Enter the system **Settings** → **Account & sync** →**Add account**. Complete the setting according to the prompts . After then you can use the calendar. Don't need to add Exchange account if only view the calendar .

**Add Event**

1.On the **Calendar** screen, tap on the date when you want to add an event.

2.Tap on the event time → tap .

3.In each field, enter the details of the related activities.

4.Tap **Done**.

Click the date time in the upper left to choose the calendar you want, such as DAY,WEEK，MONTH and AGENDA display mode.

☆ *Dates with gray bars indicate scheduled events.*

# 17 CAMERA

Tap the Camera application icon.

### Take Pictures

1.Tap switch to camera, and you can take picture.

2.Tap take picture.

3.The picture will be saved.

4.Tap the picture thumbnail to enter **My Photo** to scan the picture.

1.Press **Back** to the **Camera**.

2.Tap to exit the **Camera** and back to the **Desktop**.

### Take Videos

1.Tap switch to video, and you can take videos.

2.Tap to begin and tap to stop.

3.The video will be saved.

4.Tap the video thumbnail to play the video.

5.Press **Back** to the **Camera**.

6.Tap to exit the **Camera** and back to the **Desktop**.

### Single-motion Panorama

For capturing larger scenes, tap icon and switch to single-motion panorama mode. In this mode, the user starts an exposure and then slowly turns the Camera to encompass as wide as a perspective needed. The Camera assembles the full range of continuous imagery into a single panoramic photo.

**Note:** You can tap

on the top left of the interface to choose the files are stored in the ROM, SD card or USB storage.

## 18 CALCULATOR

1.Tap the Calculator application icon.

2.Tap the numbers and sign of operation to do the calculation.

3.Tap **CLEAR** to clear the result one by one, tap and hold **CLEAR** to clear all.

## 19 MYRECORDER

1. Tap the recorder icon.

2. Tap the record icon to start recording.

3. Tap the record icon to stop record.

4. Tap the play button to play the voice of recording.

# 20 EMAIL

☆ *POP3 and SMTP accounts are supported.*

**Add Email accounts**

You can enter one or more personal email addresses that you would like to access through your tablet.

1.Tap the **Email** application icon.

2.On the **Account setup** screen, enter your email address in the **Email address** entry field.

3.Enter your email password in the **Password** entry field

4.Tap **Next**.

**5.Manual Setup** *(optional)*: The server settings are automatically populated based on your email account provider *(i.e., gmail.com, etc)*. However, if you need to change the server settings, tap **Manual Setup** to make necessary changes.

6. According to the selected mailbox server, enter or select the parameter and server type ,and then Tap **Next**.

7. Optional: Enter a name for the account.

8. Enter name for outgoing message → tap Done.

☆ *After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).*

**Email Inbox**

1.Tap the **Email** application icon.

2.If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the **Accounts** screen.

3.Tap on the desired email account → tap **Inbox**.

**Open Email Message**

1.On the **Inbox** screen, tap on an email to open it.

2.For attachments, tap **Open** to launch appropriate application, or tap **Save** to save attachment to a SD card.

3.To replay, tap **Reply** or **Reply all**.

a. Tap in the Compose Mail entry field to enter your reply message.

b. Tap Send to send immediately, Save as draft to save without send or Discard to discard without saving or sending.

1.To delete the email immediately, tap **Delete**.

**Compose New Email Message**

1.On the Inbox screen, tap .

2.Enter the e-mail address in the recipient field. if you want to add Cc or

Bcc recipients, tap → Add Cc/Bcc, and then enter the recipient's email address.

1.Tap in the **Subject** entry field to enter your desired subject title.

2.Tap in the **Compose Mail** area to enter your personal message.

3.If desired, tap → to attach a file.

4.When ready to send the email, tap SEND.

### Edit Email Accounts

1.Tap the **Email** application icon.

2.On the Inbox screen, tap → **settings**.

3.Set your desired preferences to customize your email account.

4.Tap to return to the Inbox screen.

### Delete Email Accounts

☆ *If you have multiple accounts, delete the account designated as the default account, the next email listed will be automatically set as the default.*

1.Tap the **Email** application icon.

2.On the **Inbox** screen, tap → **Settings**.

3.Click the account you want to delete.

4.In the pop-up **Account options** window, tap **Delete**

5.Tap **OK** to confirm the deletion.

### Set Default Email Account

You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.

1.Tap the **Email** application icon.

2.On the Inbox screen, tap → **Settings**.

3.Tap the desire account.

4.In the right settings list, tap **Default Account** to select it.

If you delete the account that was designated as the default account, the next email listed is automatically designated as the default.

# 21 FILE BROWSER

Tap the **File Browser** application icon to view the files on all storage devices *(Internal memory, SD card, USB device)*, and to install Android

application on your tablet quickly & easily .

Use the icons across the top of the screen as follows:

Internal Flash (ROM)

SD Card

USB Storage

Paste

Back to the previous folder

Switch folder display mode.

Menu

**Copy Media between Computer and Tablet**

You can use the File Browser to copy files between an external storage devices and your computer. You can first copy the desired files onto a SD card or USB device.

☆ *The internal device storage is titled "ROM", memory card "SD" and USB storage device are titled "USB".*

☆ *The instructions below are for copying from an SD card or USB storage device into the device. You can use the same method to copy from the device to an SD card or USB*

*storage device, and then connect the storage device to your computer to transfer the files into the desired folder on your computer.*

1.Tap **GoTo**, select SD or USB to display the contents of your storage device.

2.Tap and hold a folder/file and enter into the multi-select mode, select the folder/file as desire → tap **Copy**.

3.Tap **GoTo**, select ROM Internal Memory → tap on the folder into which you want to copy the file → tap .

**Connected to the local area network shared folders**

You can view all of the LAN shared folders.

1.Connect to LAN.

2.Tap **Net share** →**Add new sharing point** →**Choose the mode used of sharing** → **Editor of network folder sharing**.

3.After connect successfully, enter **network sharing settings** and open the list of shared folder directly.

**Delete files**

Tap and hold a folder/file and enter into the multi-selection mode, select the folder/file as desired → tap **Delete** → **OK** to confirm the deletion.

# 22 MY MUSIC

☆ *Audio file formats supported: MP2, MP3, WAV, AAC, WMA.*

## Play Music

1.Tap the **My Music** application icon.

2.Select an audio file from All/Albums/Artists/Directories/My Favorites/User Defined Playlists to play it.

3.To stop the music, tap the **Pause** icon.

4.When you are playing the music, you can tap or to return to the previous screen.

Click switch to the currently playing interface, It is shown as follows:

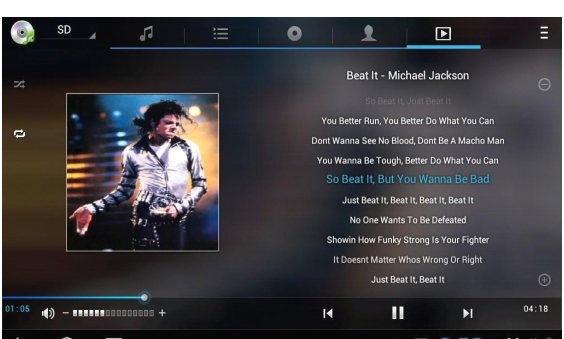
SD
Beat It - Michael Jackson
So Beat It, Just Beat It
You Better Run, You Better Do What You Can
Dont Wanna See No Blood, Dont Be A Macho Man
You Wanna Be Tough, Better Do What You Can
So Beat It, But You Wanna Be Bad
Just Beat It, Beat It, Beat It, Beat It
No One Wants To Be Defeated
Showin How Funky Strong Is Your Fighter
It Doesnt Matter Whos Wrong Or Right
Just Beat It, Beat It
01:05
04:18
3:53AM

At this interface, you can do: view /download the lyrics, display album photo or spectrum, play / pause, switch to the previous / next, loop and random operation etc.

### Create Music Widget

**Can play the music quickly through the Music Widget .**

Tap icon on the desktop, In the pop-up list select **Widgets** → Select **Music Widget**.

### The Operation with Music and Playlist

**Add playlist**

1.Choose to enter the playlist interface → click .

2.Input the playlist name.

3.Tap **Save**.

**Rename or Delete playlist**

Switch to **display mode,** Tap the playlist → tap → Enter a new name in the dialog box, and click **Save.** If you want to delete the playlist, click →click **save.**

**Add music**

1.In the **all song, album**, and **artist** list, tap the music and hold for switching to multi-select mode.

2.Select the music which you want to add to the list (if you don't want to add, tap it again to cancel).

3.Tap **Add to playlist**, and then select a playlist.

**Delete music**

Tap and hold on the music you want to delete → tap **Delete**.

**Sort by title or date added**

In the all song interface, click the on the upper right, select **sort by title** in the pop-up list **,** then click the "alphabetical" of the right hand, the songs interface will be sorted quickly according to the first letter (including the first letter of the pinyin)in the alphabetical list. If you select **Sort by date added,** all songs will sorted by add date.

# 23 MY VIDEO

☆ *Video file formats supported: MPEG1/2/4、H263、H264 VC1、RealVideo、MotionJPEG. The largest video format is supported 1080P(1920×1080) resolution.*

**Play Video**

1.Tap the **My Video** application icon.

2.Select the video from ROM, SD card or USB.

3.Tap screen and click the related icon to adjust the video, (including volume, pause/play, brightness, track, subtitle, and display scale).

4.Tap **Back button** or to return to the **My Video** screen.

**Create Video Widget**

**Can quickly play the video through the Video Widget .**

On the desktop tap icon, select **Widgets** in the pop-up list → Select **Video Widget**.

## The Operation with Video

### Zoom video screen

In the video player interface, drag two fingers on the screen with reverse / opposite direction can zoom in / zoom out the video screen.

### Setting video display mode

Tap icon，the video screen can be set as "full screen, actual size, best fit" three modes.

### Audio track and subtitle switching

In the video player interface, click icon on the top right to switch **audio track** and **subtitle**.

## The Operation with Playlist

### Classification of video list

In the root directory, click the **album** (**times**) on the top left to classify the video.

### Switch display mode in the classification folder

In the classification folder, click and icon to set list display mode or album display mode.

☆ *In the classification folder, users can click* *to classify the video by time or name.*

**Send or delete the video in the list**

Tap and hold the video, →click the **option** or **delete** button on the top right of the screen to send or delete the video.

# 24 MY PHOTO

☆ *Photo file formats supported: JPG, JPEG, BMP, and PNG.*

1.Tap the **My Photo** application icon.

2.Tap on the desired photo, to view individual photo.

3.Click on the top right screen to operate the corresponding photos.(including zoom in/zoom out, share, rotate, trim, photos set to, adjust the current display scale, showing details)

**The operation with picture list**

**Classification of photo list**

In the root directory, click the **album** (**times, Locations, people, or tags**) on the top left to classify the photo.

**Delete the photo in the list**

Tap and hold the video →click the **delete** button on the top right of the

screen to delete the photo.

**Slide show and settings**

**Enter the slide's setting**

1.Tap the **My Photo** application icon.

2.In the root directory, click the on the top right→ **setting.**

3.In the settings interface, set the **Filter photo by file size, slideshow speed,** and **slideshow mode**.

**Slide show**

1.Tap the **My Photo** application icon. Click the photo folder.

2.click →**slide show.**

☆*In the classification folder, users can click*  *and classify the photo by time , color or name.*

**Doodle**

☆ You can do doodle in **My Photo** interface.

1. Open the picture.

2. Click the icon → Select **My Photo**.

3. In the doodle interface, user can choose the different doodle function, such as brush, shadow, FX, board, or crop.（**Note:** It will missing brush function if you choose the **Gallery**）

4. After finish the doodle, click the **save** icon**.**

5. Click the icon to return to picture browsing interface.

### Create Photo Widget

**Through the Photo Plug-ins can quickly open the photos.**

Tap on the desktop, select **Widgets** in the pop-up list →Select **Photo Widget.**

# 25 Gallery

### The operation with photo and video list

**Classification of photos and videos list**

In the root directory, click the **album** (**times, Locations, people, or tags**) on the top left to classify the photos and videos.

**View, play the photos and videos**

**Photo:** In the classification folder, click on the photo thumbnails to open the photo, and on the top right of the folder interface tap icon to play slide.

**Video:** In the classification folder, click on the video preview, enter the video preview interface, and click the play button in the video preview to play the video.

**Delete the photos and videos in the list**

On the top right of the screen, Tap icon →Tap **select album** or

**Select item**, then select the photo or video which you want to delete, tap

→ **Delete**.

☆ ***Gallery*** *only supports the display and manages photos and videos in the* ***default reading/writing storage****. To toggle the display of the storage area, go to* ***Settings*** *→* ***storage*** *→* ***default reading/writing storage*** *to make changes. The device default storage area is SD card.*

# 26 SCREEN CAPTURE

You can capture a screen image by tapping at any time.

Tap the **Screen Capture** application icon to set options for a screen capture.

- Select a delay timer to capture the screen （seconds）.
- Select the default storage device.
- Show screen capture icon in status bar.

After the images are saved, they can be viewed through **My Photo** application.

# 27 TASK MANAGERMENT

Use PK Manager to manage applications and widgets.

### Stopping Applications

Android does not automatically stop applications after they are loaded, so you can manually stop the applications as desired.

1.Tap the **Task Manager** Application icon.

2.Tap **Running** to display all running applications.

3.Tap on an application you want to stop → tap **Force stop** →**OK**.

### Uninstall Applications

1.Tap the **Task Manager** Application icon.

2.Tap **All** to display all applications.

3.Tap on an application you want to uninstall → tap **Uninstall**.

1.Tap **OK** to confirm uninstall.

### Install Applications

2.Tap the **Task Manager** Application icon.

3.Tap **Install** to display all applications and folders.

4.Find and tap on an application you want to install → tap **Install**.

# 28 WI-FI

Tap **Settings** → **Wi-Fi,** enter into Wi-Fi settings.

1.Slide the Wi-Fi switch to turn on Wi-Fi.

2.All the AP in the vicinity will be listed, click to select the name you want to connect to AP;

3.If the AP is connected successful before, the AP information will be saved in the pop-up window, select "Connect" starts to connect, choose "forget" to remove AP information;

4.If the AP is not encrypted, in the pop-up window, select "Connect" Start Connection;

5.If the AP is encrypted, enter the password in the pop-up window, and click "Connect" Start Connection;

6.When internet connections are successful, the wireless connection icon will appear in the bottom status bar .

# 29 3G NETWORK

First of all, you need to buy 3G wireless network card according to China Telecom, China Mobile or China Unicom. For the currently supported 3G card type, please refer to **3G dongle support list** or **appendix.**

We strongly recommend to buy the USB 3G Dongle in order to ensure normal 3G Internet access. Please put the prepaid card into the USB 3G Dongle, insert the USB 3G Dongle into the USB host transfer cable and then insert OTG interface. It will be bright lights on the USB 3G Dongle, which indicate that it could begin to connect the 3G network.

Tap **Settings** → **3G network,** And tap "**Add 3G network**", in the popup dialog box, Fill the **name**, **Device number**, **APN**, **user** and **password** information.

**Name:** In the popup dialog box, Name field enter the name.

**Device number and APN:** Please fill in the information provided by operating agencies. (As in China: If you use China Unicom and China Mobile's 3G network card, **device number** field need to fill in "*99#", **APN** need to fill in the "cmnet"; if China Telecom formats 3G on the card, phone number need to fill in the column "T#777", **APN** do not need to fill in the name of column.)

**User and Password:** If you use the standard of China Unicom and China Mobile's 3G network card, user and password fields are free to fill or not fill; if you use the standard of China Telecom's 3G network card, **user and password** fields need to fill in( **user**: card, **password**: card).

**Note:** If it does not work properly for entering the above user and password. Please try to fill in (**user**: ctnet@mycdma, **password**: vnet.mobi) or (**user**: ctnet, **password**: vnet.mobi), also you can ask to China Telecom.

Click the connect after finishing filling, then you will see the 3G symbol

appearing at the bottom of status bar , indicating the 3G network is

connected, and then you can get online.

## 30 GPS

GPS functionality requires the use of a USB interface external GPS receiver. (It access to device via the USB host transfer cable). Users need to download the navigation software and map from the internet, through the SD card installation (please refer to the Application Management section of this User Guide). For the currently supported GPS receiver type, please refer to Appendix.

# 31 PPPoE SETTINGS

Before using this feature, connect the USB network card via the USB host transfer cable access to device.

1. Tap **Settings** → **PPPoE settings** .

2. Input name and password then click connect to access the broadband network.

# 32 ETHERNET

Before using this feature, connect the USB network card via the USB host transfer cable access to device. When the USB network cable plugged into the USB network card, you will see the bottom of status bar ETH symbol

appears

1. Tap **Settings** → **Ethernet**.

2. The device can automatically obtain IP address to connect to the network. You can also choose to manually set the IP address to get connected.

# 33 SETTINGS

| | | | |
|---|---|---|---|
| **Wireless & networks** | **Wi-Fi** | Turn on /off Wi-Fi, Set up & manage wireless access points. | |
| | **Ethernet** | **DHCP** | Automatic assign IP address |
| | | **Use Static IP** | Manual assign IP address |
| | **PPPoE settings** | Set up ADSL network | |
| | **3G network** | Set up 3G network. | |
| | **Data usage** | View of data usage | |
| | **More…** | **Airplane mode** | Disable all wireless connections. |
| | | **VPN** | Add Virtual Private Networks (VPNs). |
| | | **Mobile network** | Set up mobile network |
| **Device** | **Sound** | **Volumes** | To adjust the Media volume. |
| | | **Default notification** | Select desired ringtone sound. |
| | | **Vibrator** | Turn on/off vibrator |
| | | **Touch sounds, screen lock sound** | Turn on/off operating sounds. |
| | **Display** | **Brightness** | Adjust the screen brightness as |

| | | | |
|---|---|---|---|
| | | | desired. |
| | | **Wallpaper** | Set up wallpaper |
| | | **Auto-rotate screen** | Auto-rotate switch. |
| | | **Show full-screen gesture tip** | Full-screen gesture prompts |
| | | **Screen timeout** | Adjust the delay before the screen automatically turns off. |
| | | **Font size** | Set the system font size |
| | **Storage** | | View, uninstall, and format the internal memory, SD card and USB storage. |
| | **Battery** | | View the usage of the battery. |
| | **Apps** | | View and uninstall applications |
| **Personal** | **Account & sync** | | Add sync account. |
| | **Location services** | **Google's location service** | Let apps use data from source such as Wi-Fi and mobile network to determine your approximate location |

| | | | |
|---|---|---|---|
| | | **GPS satellites** | Let apps use GPS to pinpoint your location. |
| | | **Location & Google search** | Let Google use your location to improve search results and other service. |
| | **Security** | **Screen lock** | |
| | | **Owner info** | |
| | | **Encrypt tablet** | Require a numeric PIN or password to decrypt your tablet each time you power it on. |
| | | **Make passwords visible** | |
| | | **Device administrators** | View or deactivate device administrators |
| | | **Unknown sources** | Allow installation of non-Market apps. |
| | | **Trusted credentials** | Display trusted CA certificates. |
| | | **Install from SD card** | Install certificates from SD card. |
| | | **Clear credentials** | Remove all certificates. |

| | | | |
|---|---|---|---|
| | **Language & input** | **Language** | Setting system language. |
| | | | Spelling correction, personal dictionary, keyboard and input methods, text to speech (TTS) output, and pointer speed. |
| | **Backup & Reset** | **Factory data reset** | Erases all data on tablet. |
| **System** | **Date & Time** | **Automatic date & time** | Use network -provided time |
| | | **Set date** | Set date |
| | | **Set time** | Set time |
| | | **Select time zone** | Select time zone |
| | | **Use 24-hour format** | Choose 24-hour format or 12-hour format. |
| | | **Select date format** | Select date format. |
| | **Accessibility** | | Large text, power button ends call, auto-rotate screen, speak passwords, touch & hold delay, and |

| | | | |
|---|---|---|---|
| | | | install web scripts |
| | **Developer options** | | USB debugging, development device ID, stay awake, allow mock locations, HDCP checking, desktop backup password, strict mode enabled, pointer location, show touches, show screen updates, show CPU usage, Force GPU rendering, window animation scale, transition animation scale, don’t keep activities, background process limit, and show all ANRs. |
| | **About tablet** | | Status, legal information, model number, android version, kernel version and build number. |

# FREQUENTLY ASKED QUESTIONS

## Android

**Q: What Android OS version is on my Device?**

A: 4.0.3

## Basic Device Functionary

**Q: Do I have to charge the battery before use?**

A: You should charge the battery for at least 6 hours, but you can use the device while it's charging. Use the included power adapter to charge; this device does not support charging via the USB cable.

## Email

**Q: Can I use any of my personal email addresses to send/receive email?**

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if you account is supported.

## Media Cards

**Q: Which media cards are compatible with my Device?**

A: micro SD cards.

## Music

**Q: What type of music files can I play on my device?**

A: MP2, MP3, WAV, ,FLAC,APE,AAC, WMA

**Q: How do I add music files to my device?**

A: Copy the music files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

## Photos

**Q: What type of photo files can I view on my device?**

A: JPG, JPEG, BMP and PNG.

**Q: How do I add photo files to my device?**

A: Copy the photo files from your computer onto a SD card or USB storage

device, and then use the File Browser application to copy the files into the device.

Video

**Q: What type of video files can I play on my device?**

A: Video file formats supported: MPEG1/2/4、H263、H264、VC1、RealVideo、MotionJPEG.. The largest video format is supported 1080P(1920×1080) resolution.

**Q: How do I add video files to my device?**

A: Copy the video files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Wi-Fi

**Q: Do I need a Wi-Fi adapter to connect to the Internet?**

A: No. The Wi-Fi adapter is built-in to the device.

**Note**:Inconsistent with the physical specifications, please prevail in kind.

# BATTERY MANAGEMENT

The battery is not fully charged when you use the device first time, so it is recommended that you charge the battery for at least 6 hours before you use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by the suggestions as below:

- Use your tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

## Charge battery

Plug the power adapter into an electrical wall outlet, and then connect to the

device to fully charge the battery before use (A full charge takes about 6 hours in the status of "off").

☆ *You cannot charge the battery using the USB cable.*

When fully charged, the battery icon displays as .

A fully discharged battery takes approximately 6 hours to fully charge in the status of "off", but you can use the device while plugged in when desired.

## IMPORTANT SAFETY PRECAUTIONS

Always follow these basic safety precautions when using your tablet. This will reduce the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Avoid being stepped or don't put object on the power cord when make charging. Pay more attention to the point where the cord attaches to the device.
- Pleas use the AC adapter included in the device packaging. Using any other power adapter voids your warranty.
- Do not unassemble the device by yourself. Any damaged by your own is out of warranty.

### Cleaning your device

Treat the screen gently. Pls use soft, non-abrasive cloth such as a camera lens cloth to clean fingerprints or dust on the screen.

## Appendix : The optional parts and models

| Parts name | Parts type | |
|---|---|---|
| 3G Wireless Network Card | TD-CDMA | TD368 |
| | WCDMA | HUAWEI E220 |
| | | HUAWEI E230 |
| | | HUAWEI E160X |
| | | HUAWEI E169G |
| | | HUAWEI E1750 |
| | | HUAWEI E173 |
| | | HUAWEI W8 |
| | | HUAWEI E153 |
| | | HUAWEI E153u6 |
| | | VW718/719 |
| | | Alcatel AL720 |
| | | ZTE MF190 |
| | | ZTE MF110 |
| | | ZTE MF210 |
| | | SEW868 |
| | | UW100 |
| | CDMA2000 | Bora 9380 |
| | | AWIT-U8 |
| | | RATE EC186 |
| | | ZTE AC2736 |
| | | SEV759 |
| GPS Receiver | Central-day technology ND100 | |
| | Central-day technology ND100S | |